

ENOCHS POWER 4000 Recommended Hydraulic Oil

Position back DOWN and table UP to fill the reservoir. The fill level should be $\frac{1}{2}$ "– $\frac{3}{4}$ " below fill hole to allow for expansion of oil during system operation.

Power 4000 is **NOT** a self purging unit so you will have to fill the unit, place cap on reservoir and run unit several cycles to purge air out of the cylinders and hoses. Loosen cap periodically to release air out of reservoir.

Mobil DTE 24 Hydraulic Oil available at www.grainger.com.

Product Name: Oil,Hydraulic, 1gal Grainger Item #: 4ZF33

